

Document Number

Title

Part Code/s Version

Description

Pre-Checks

How to Fix External Lever Handle

Colours Available			
Black	Gold		
Chrome	Antique Black		
Bronze	Graphite		

Parts & Materials Required			
1x Fixed Bracket	0		

ς	t۵	ns	

holes top and bottom.

Step 1 Remove the external handle from the pack. External handle is the one without the screw

Position the lever handle the correct way to ensure this matches with the position of the door.

N.B- Check which side the door is hinged on. Use the key to show correct way

Step 3

With the external handle now fixed in the correct position. This needs to be applied to the door.

When fixing the handle set to the door make sure screws and spindle are present.



How to Fix External Lever Handle?

TDC-063


٧1

Step 2

Guide showing how to fix an external lever handle

Ensure all parts are available and check which way door is hinged

Now using the fixed bracket, push this over the top of the spindle hole. Ensuring the lever handle is being fixed the

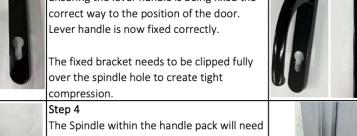

Black=1D531 / Chrome=1D533 / Bronze=1D535 / Gold=1D536 / Antique Black=1D537 / Graphite=1D538

6-7mm cutting off the square shaped part to enable the handles to sit flush to the door slab inside and out.

Once complete slide spindle through spindle hole on the door. Make sure the rounded part of the spindle is on the external side.



Step 5

With the spindle now fitted within the lock. The screws now need to be tightened at the top and the bottom of the internal handle.

The screw length within the pack will need to be amended slightly. Including the head the screws need to measure 60mm. Cut the screws down accordingly to suit.



Step 6

With the screws at the correct length. Tighten the screws on the inside handle. Handle set is now fixed to the door slab.

With the fixed handle fitted externally. Using the key each time to unlock the door once shut into the outer frame



1x Spindle



1x Lever Handle

Key- Viewed External





