

# **Bi-Folding Door** Installation Guide

#### Section A

Door Installation A1 - A7

#### Section B

Lock Adjustment B1

#### KF

#### Section C


Kit-Form Pre-Assembly C1 - C2

#### Section D

De-Glazing Instruction D1







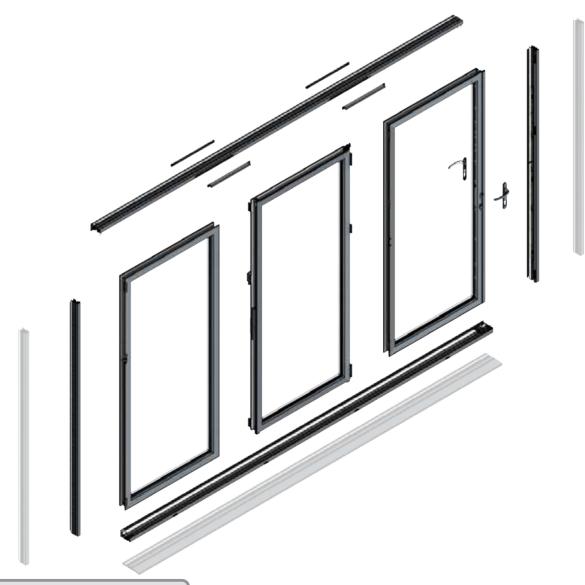





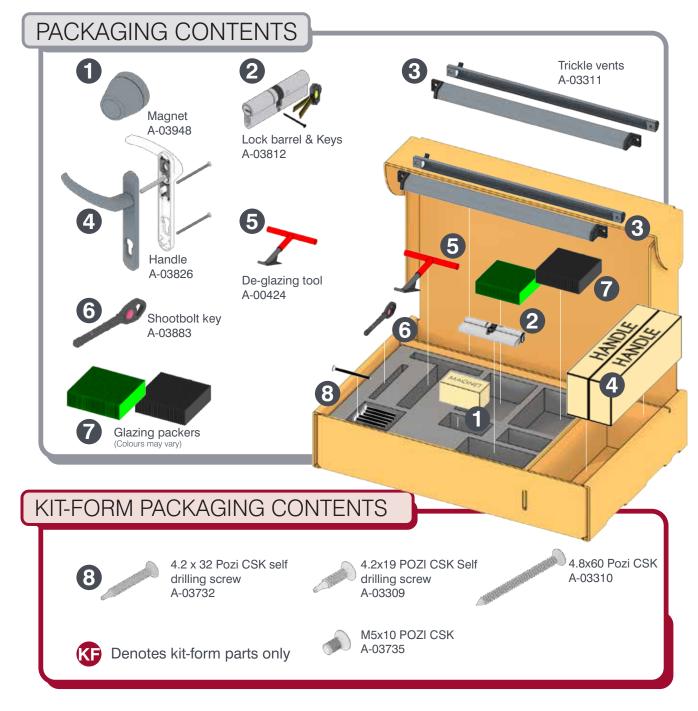


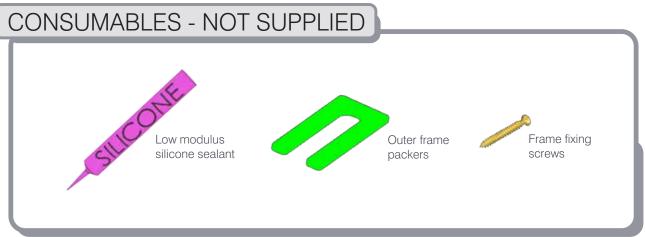





### BEAD UNPACKING



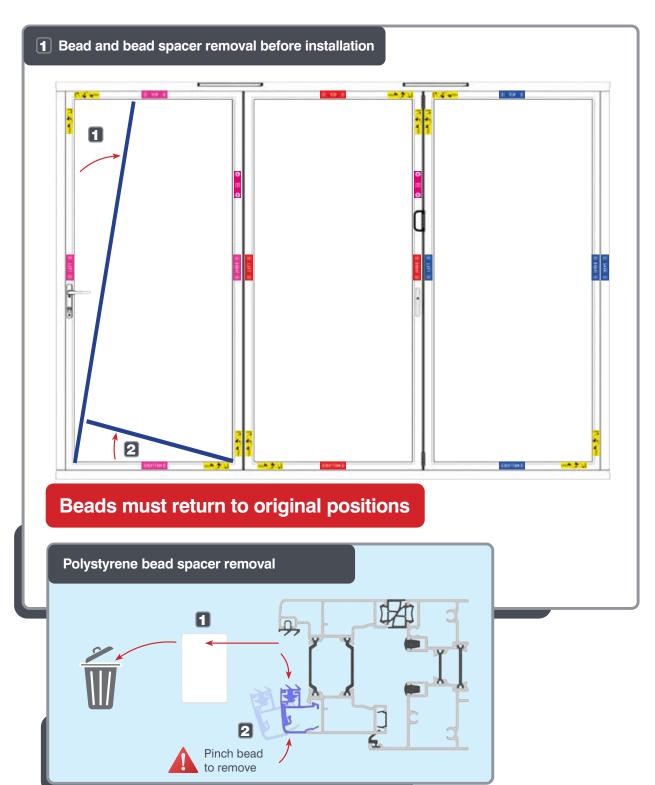





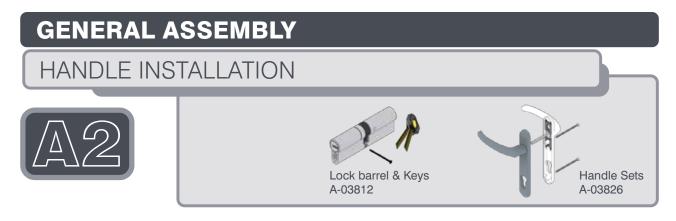

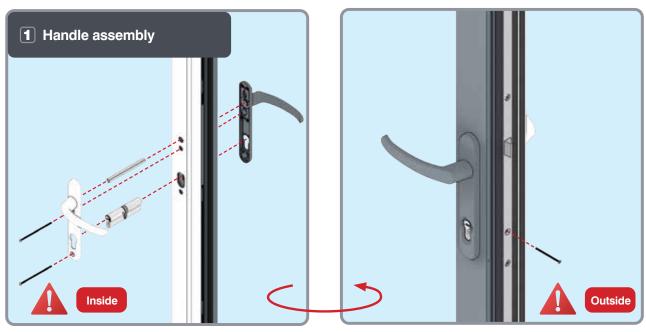



### OPTIONAL TRICKLE VENT INSTALLATION

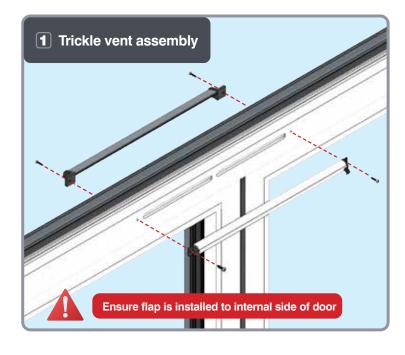


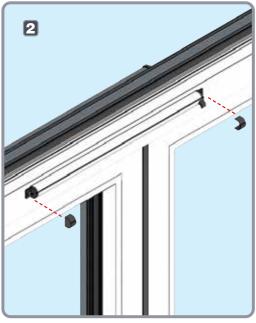




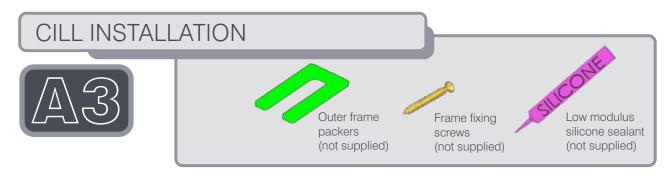

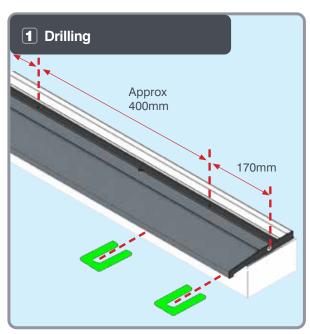

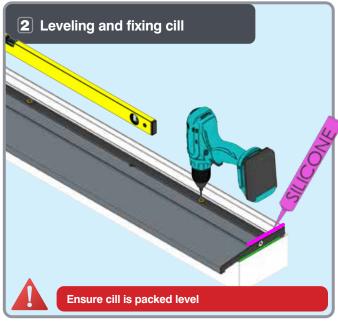

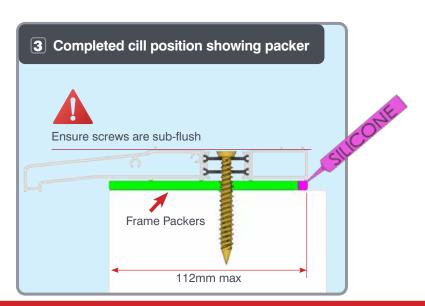

Note - Cill packers and screws are not supplied



Ensure cill is level: ±1mm





### DOOR POSITIONING






Only remove keep when keep mounted to outerframe

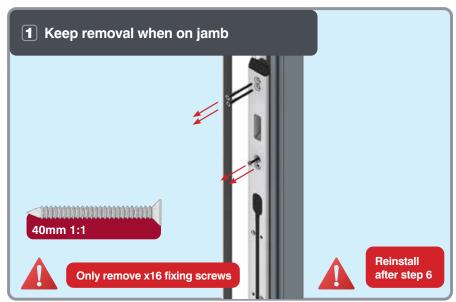


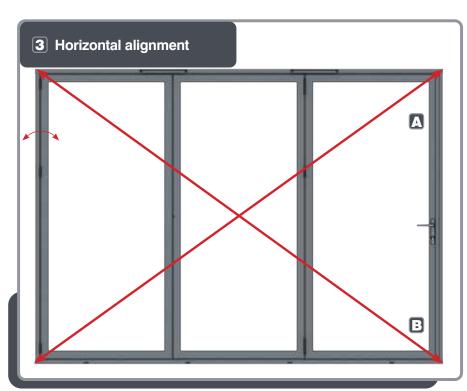


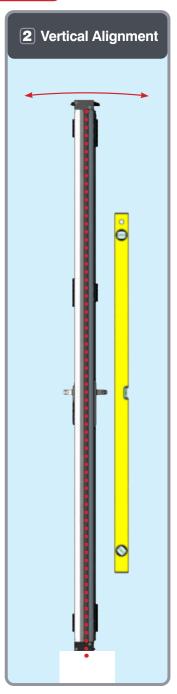







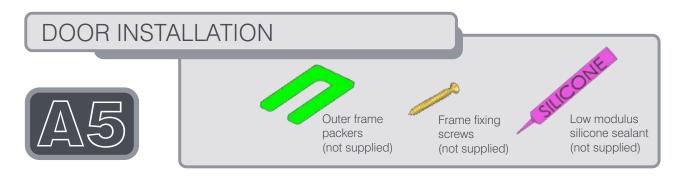

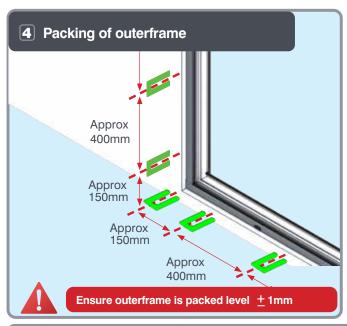

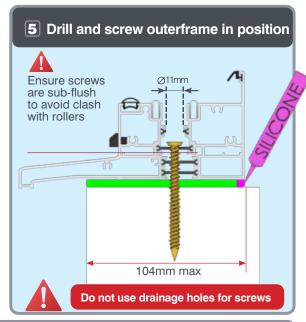

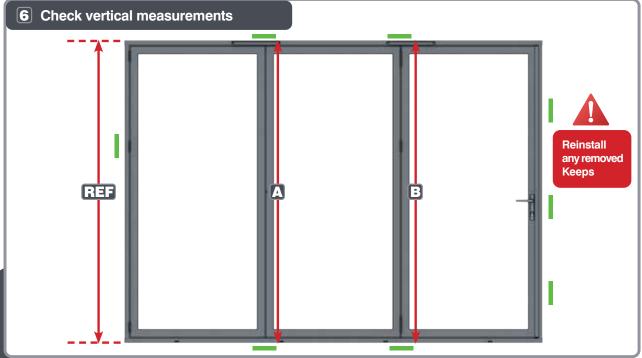





Ensure verticals: REF=A=B ±1mm

Extra packers at locking points and hinges






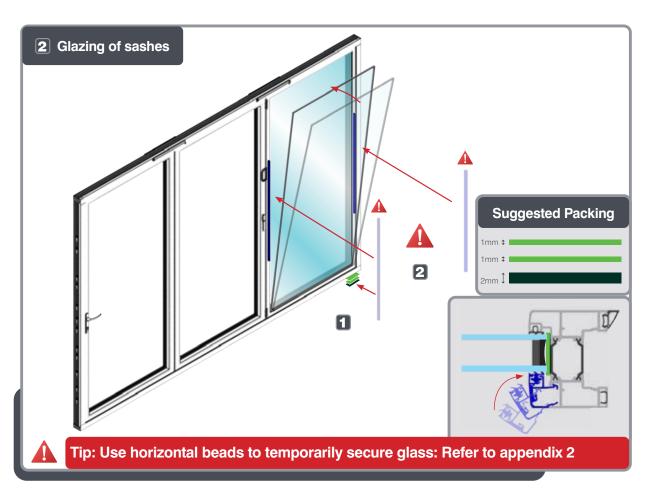

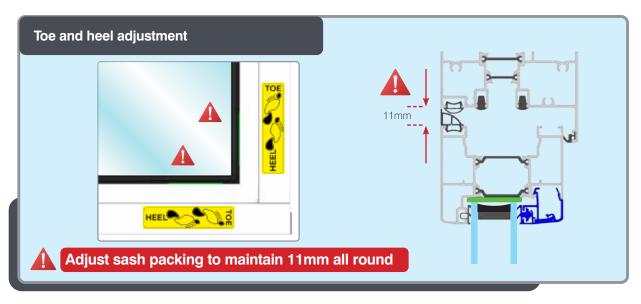







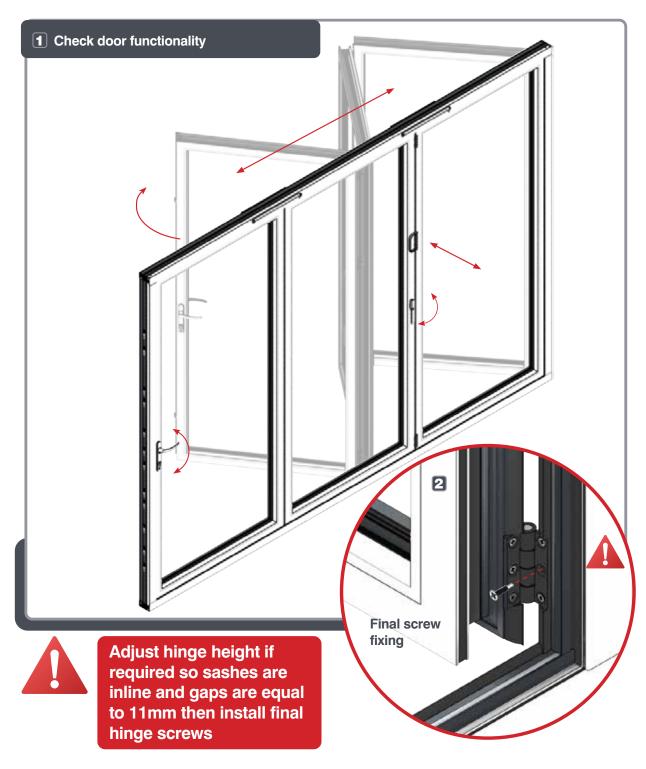






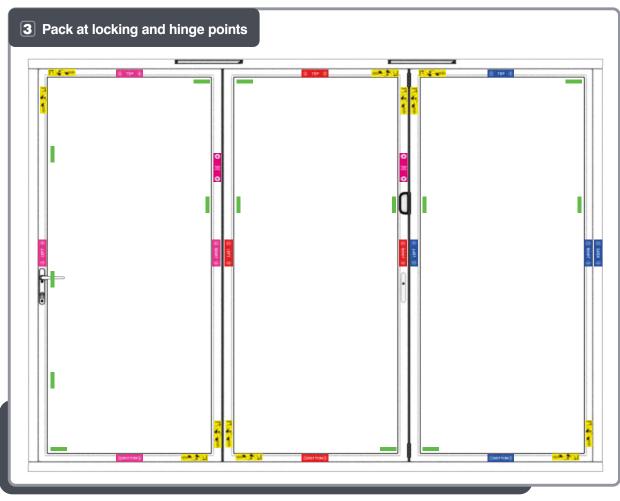

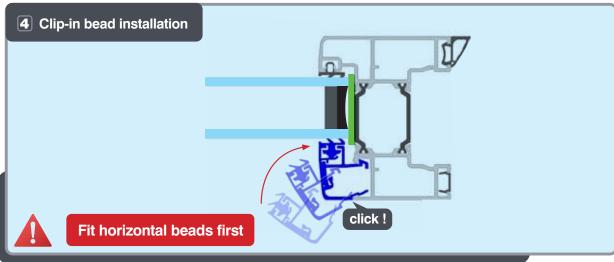



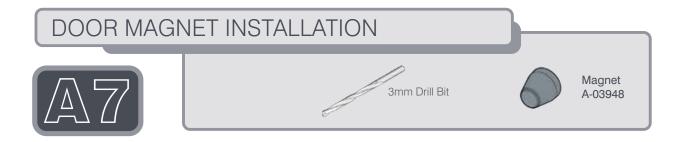












Before adjusting lock ensure door frame and glazing is correctly packed

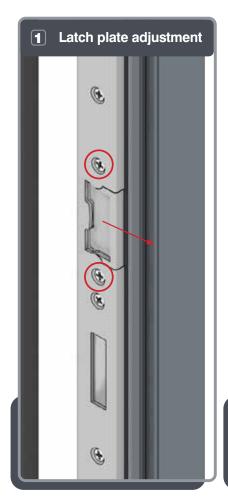





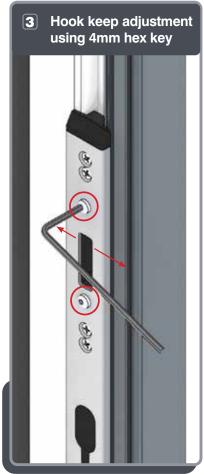




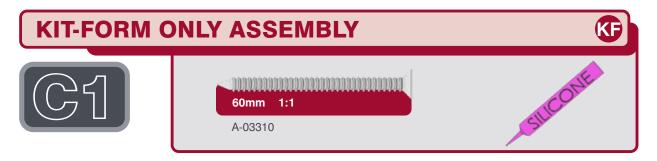

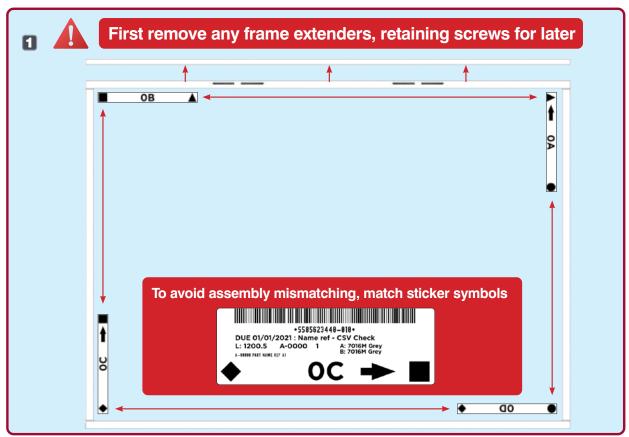


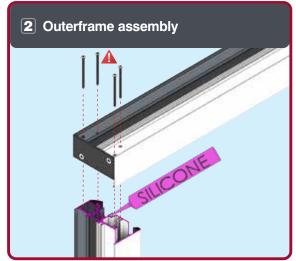

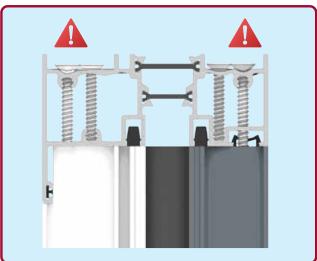






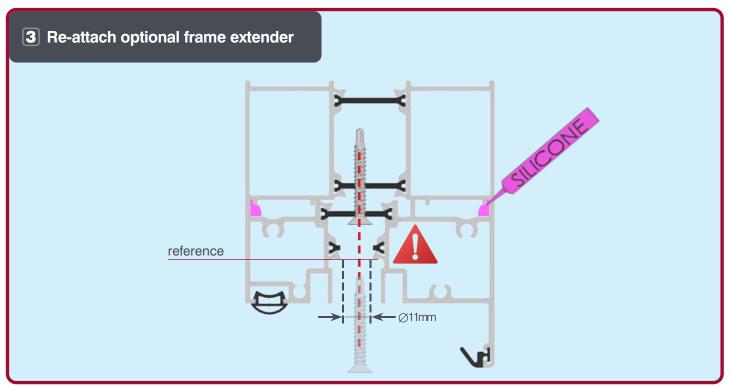





#### Ensure screws are sub-flush to reference line

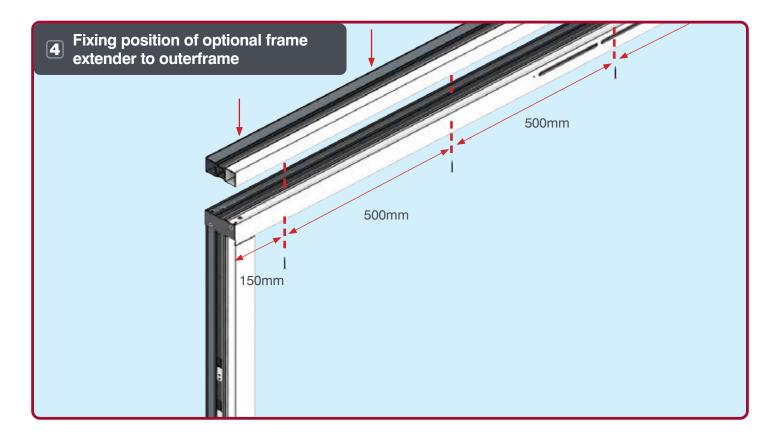






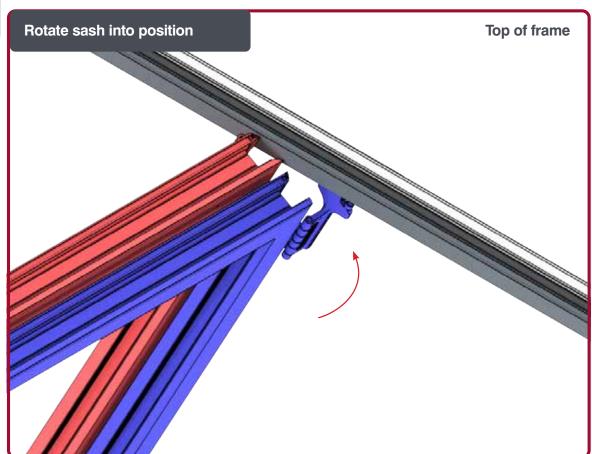

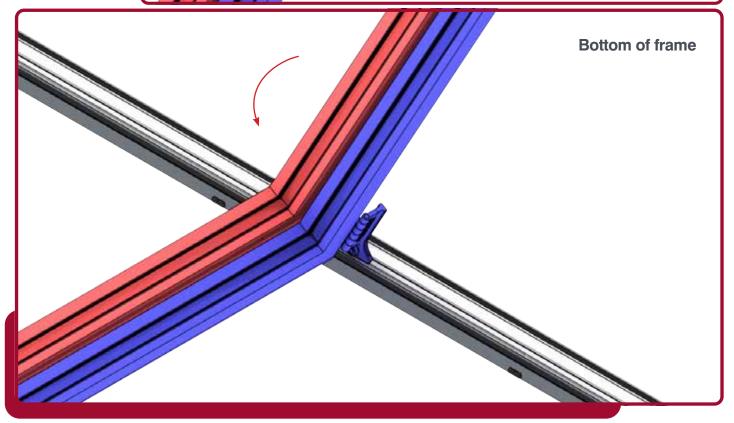





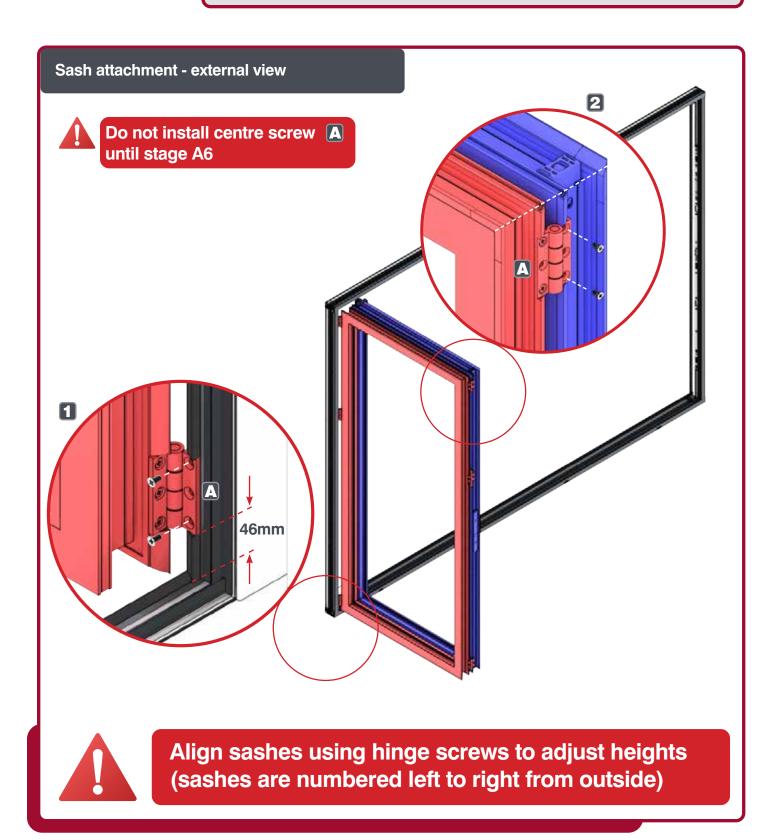





### BEAD REMOVAL WHEN REGLAZING





### Ensure tool and glass are clean to avoid scratches

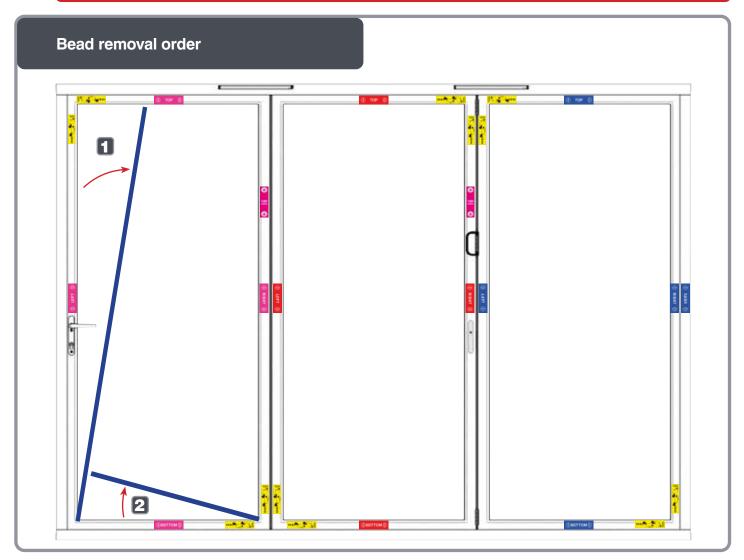

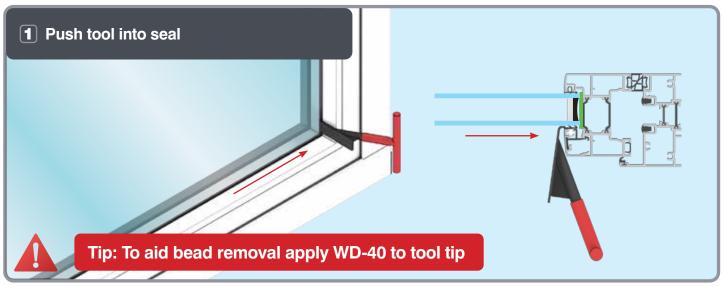

## BEAD REMOVAL WHEN REGLAZING

