


Type: ERA/Comp Door Flag Hinge

Lateral Adjustment (mm): +/- 4mm

Height Adjustment (mm): +/- 4mm

Colour Finishes:

- White
- Black
- Chrome
- Gold
- Graphite

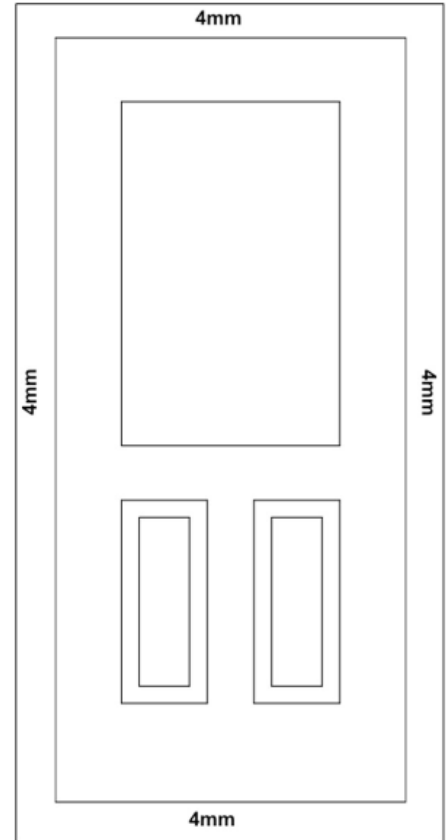

Adjusting the flag hinge:

1. Unclip hinge cover plate which can be located on the inside of the door
2. Remove the cover plate away once unclipped
3. Release the two screws in the lateral position and undo the screws to alter the height by two turns
4. Repeat the first 3 steps for the other two hinges
5. Once all 3 hinges have been released, lift the door to the correct position.
6. Insert 4/5mm packers between the door slab and internal frame to ensure gapping is equal all the way around the door
7. Once gapping is equal, tighten the screws in the height position and insert screws in the lateral position. (New holes might have to be drilled for the lateral position)
8. Clip cover plate back on to the hinge and remove any glazing packers that have been used to assist with adjusting the hinges
9. If lateral movement is required, repeat the above in reverse order



Hinge Cover Plate



Hinge Adjustment

